
*Necessary preliminary tasks:*

- Remove spray nozzles of headlight cleaning system.


**Warning!**

Follow instructions for handling light bulbs (exterior lights).

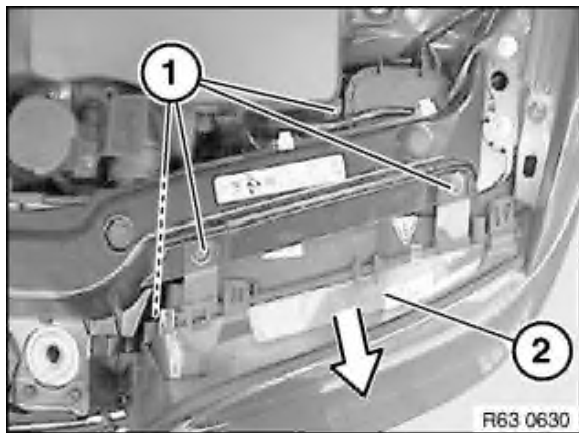

Release screws (1).

Pull headlight (2) forwards slightly in direction of arrow.

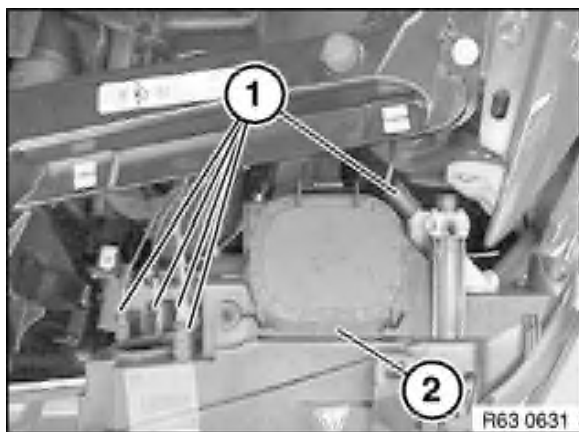

Unlock plug connections (1) and disconnect.

Remove headlamp (2).



Installation:

- Observe gap dimensions.
- Adjust headlights.



Replacement:

- Remove ignition unit and lamp for xenon headlight.
- Remove control unit for xenon headlight.