


Remove turn signal lamp.

Remove trim from headlight housing.

Unclip cover strip from outside to inside.

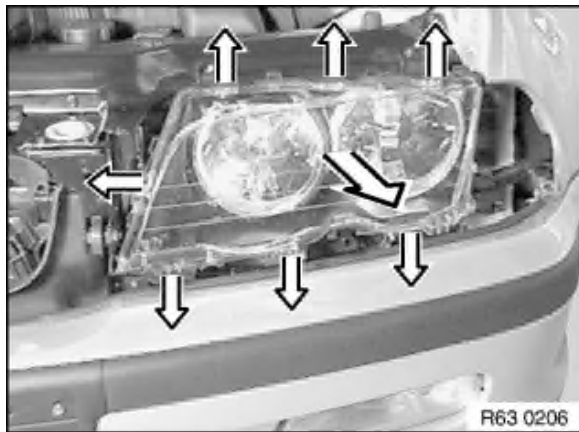

Unclip all retainers.

Remove lens cover.

*Installation:*

If necessary, replace headlight seal.

Contact point of headlight seal is situated on radiator side (high beam headlight) in area of clip.