

Remove headlight.



Release screws and remove lower holder.

*Installation:*

Tighten screws hand-tight only.

Install headlight and align to engine hood.

Tighten down screws.

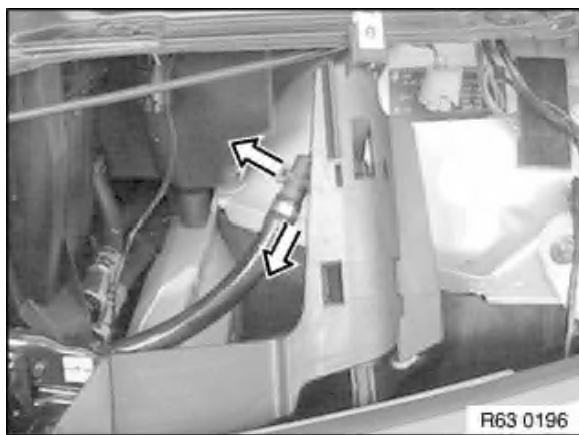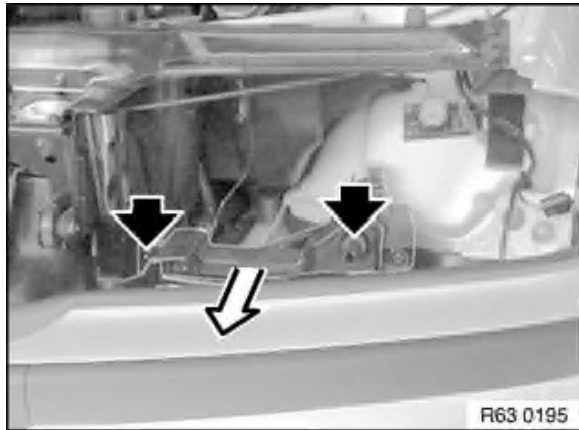

Version with headlight cleaning system:

Unclip clip for hose (1) and disconnect hose (2).