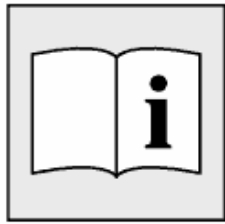
**Coupé/Convertible from 03/2003:**

Remove left headlight (xenon headlight).

**All others:**

*Necessary preliminary tasks:*

- Remove direction indicator lamp.
- Remove trim from headlight housing.


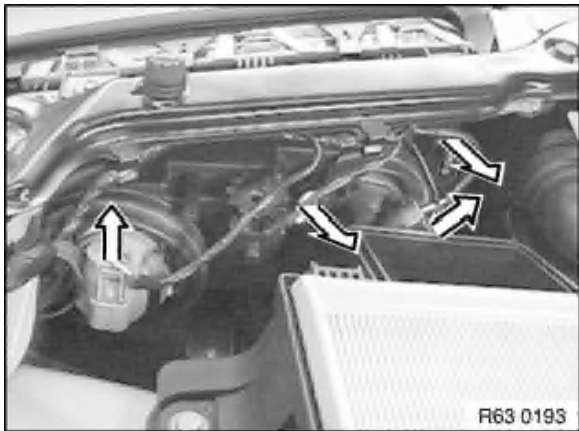
*Note:*

Illustration shows air cleaner cover removed for purposes of clarity.

Unlock and disconnect all plug connections on headlight.

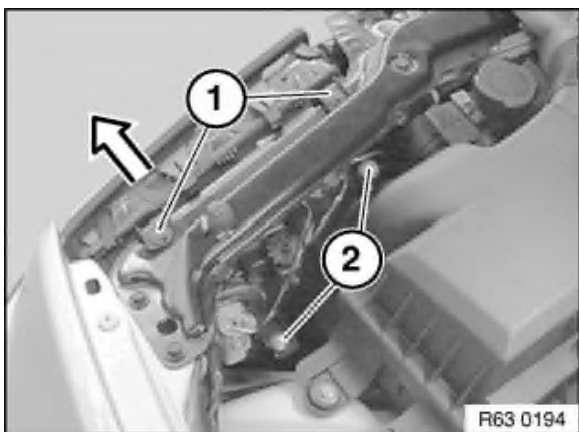

Release screws (1) and (2) and lever out headlight towards front.

*Installation:*


Tighten screws (1) hand-tight only.

Pull headlight fully towards front.

Close hood and adjust headlight to fit.

Open hood and tighten down screws (1).

Install and tighten down screws (2).

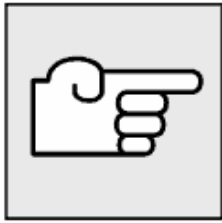

*Installation:*  
Adjust headlights.